



WERNER PADDLES

Stand Up Paddle-Family Adjustable system (Featuring Leverlock)

Directions for Tension adjustment

With a high level of care, each SUP Family Adjustable and Family Travel system (Featuring the Leverlock component) is thoroughly tested in our facilities for a precise, tight fit. However if, in the unlikely event, over time your system should become loose follow the simple directions below to adjust tension.

Tools required

- Needle Nose Pliers
- 5/16" Wrench

Instructions

- 1) Flip the lever in the palm grip to an open position and slide the handle and ferrule apart from the shaft and blade.
- 2) Secure the grip end of assembly so it is unable to move freely.

[Type text]

Stand Up Paddle-Family Adjustable system (Featuring Leverlock)

Directions for Tension adjustment (Continued)

- 3) Using your needle nose pliers, hold the cotter pin tightly.



- 4) Use 5/16" wrench to turn nut, tightening the nut will adjust the tension and remove play in the shaft. Loosening the nut will allow more space between ferrule and shaft for less resistance when adjusting paddle height.

Stand Up Paddle-Family Adjustable system (Featuring Leverlock)

Directions for Tension adjustment (Continued)

Note

If your adjustable system becomes tight and hard to adjust to length, it is likely the adjustable system is dirty, picking up sand, salt residue, and other debris from the paddling environment.

To wash

- 1) Simply flip the lever in the palm grip to an open position and slide the handle and ferrule apart from the shaft and blade.
- 2) Using clean fresh water, thoroughly wash the outside and inside of both sides of the paddle. Stand blade and palm grip up in a clean environment to allow for drying.
 - a. Do not use any lubricants as residue will only attract other debris.
- 3) In the event the system still seems tight and hard to use, follow the directions above to loosen the nut slightly reducing tension in the system.